OPERATING THE SCALE

Stand on the scale platform and remain still. When a stable weight is captured, it will automatically be transmitted to your device. When the "DASHES" appear, the process is complete and you may step off the platform.







STEP ON remain still

DONE step off



MAX WEIGHT CAPACITY	800 lbs.
DISPLAYED RESOLUTION	0.1 lb.
ACCURACY	0.2% +/- 1 digit of displayed resolution
FUNCTIONS	ZERO / WEIGH / MEM
PLATFORM SIZE	23" x 15"
PLATFORM HEIGHT	1.4"
CONSTRUCTION MATERIAL	Solid Cast Aluminum
FINISH	White Powder Coat
DISPLAY TYPE	4 ½ Digit LCD
POWER SUPPLY	9vDC Wall Transformer
WIRELESS OUTPUT	BT 2.0 HID
TABLET/ COMPUTER	Not Included

TECHNICAL SCALE SERVICE

1.888.WEIGH.ME SR Instruments 600 Young Street, Tonawanda, NY 14150


COACHMEPLUS

SCALE QUICK START GUIDE



SYSTEM COMPONENTS & DISPLAY DESCRIPTIONS



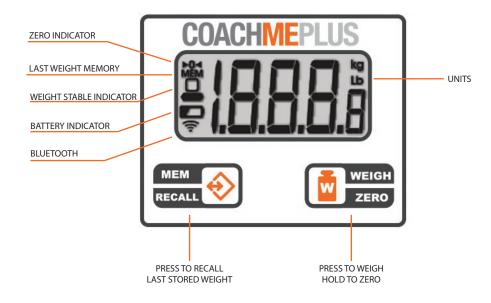

PAIRING THE DEVICE FOR THE FIRST TIME

- **1.** Enable BlueTooth on your tablet.
- **2.** Plug the scale electronics in and connect the display cable to the platform cable. Be sure to use the power supply that came with the scale.
- **3.** Press the "PAIR" button on the back of the display. The display will indicate –



- **4.** The scale device will be recognized as "CoachMePlus-xxxx". The last four characters will be unique to your product.
- **5.** Select the CoachMePlus-xxxx device.
- **6.** When the Wireless Communications Icon remains steady, the device is properly paired.
- **7.** Press the "PAIR" button on the back of the display once again to return to active weigh mode
- Press and Hold the verse button until the display reads "ZERO" then release the button. When the display reads "0.0" it is ready.

